



RELEASED
14/12/11

PPP

Part Number	D350-567-111
Description	Floor Window Installation, Extra Large

Box Part Number	BX20	Dimension	50 x 20 x 8
Other Packaging	Uline S4922		L x W x H DT8439
Logo Decals			

Packaging Instructions and Decal Placement


D350-567-111

*****Check the DT8439 template tube to make sure the template is inside*****


****Apply label D2729-4 to part number D3296-041****

Apply label D2729-4 & D2728-1 as per drawings below.

Put bubble wrap on bottom of box. Put each kit (D350-567-113 & D350-567-115) in big plastic bags and place a label D2729-3 on each bag identifying the two kits. Wrap each kit in bubble wrap and seal with Dart tape. Check the DT8439 template tube to make sure the template is inside. Place window first, then add template DT8439 down the side of the box. Add remaining parts & paperwork. Add more bubble wrap to loose spaces to prevent any movement. Seal box and apply label D2729-4 as per instructions in QSI 014.

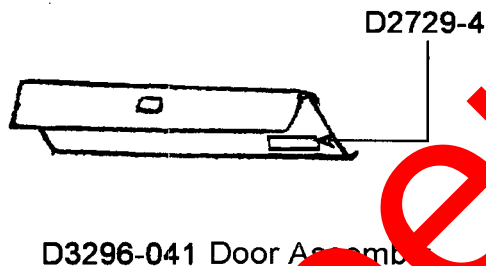

D3296-041 Door Assembly

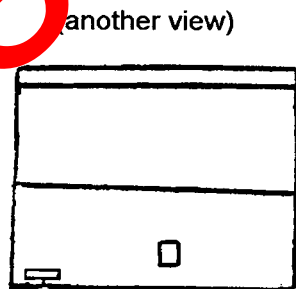

D2728-1

D2729-4

D2729-3

DART Aerospace		1270 ABERDEEN STREET HAWKESBURY, ONTARIO K6A 1K7 CANADA TEL: 1 613 632-5200	
PATENT	N/A	CHG	CHG006
P/N	D350-567-111	SIC	SH92-18
DESC	Floor Window, Extra Large	SIC	SH989NE
LOT	BXXXXX	SIC	SH990NE
MODEL	AS350/355		
TC APPROVAL 4-09-88		MADE IN CANADA	

DART Aerospace		Dart Aerospace Ltd. 1270 Aberdeen Street Hawkesbury, ON K6A 1K7 CANADA TEL.: 1 613 632-5200
FLOOR WINDOW INSTALLATION, EXTRA LARGE		
P//N: D350-567-111		CHG006
B/N: BXXXXX		

Revision: J
Date: 13.12.11